



lavabo washbasin NINA  
80x35  
art. 001 007

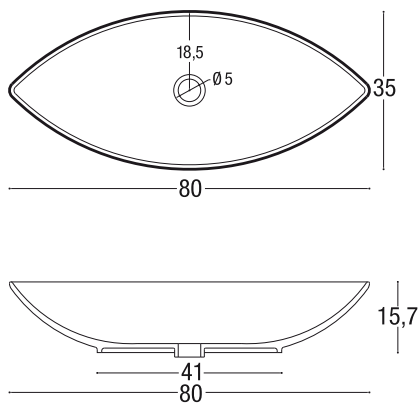

Per il montaggio il lavabo necessita di foro  $\varnothing$  150 mm For the washbasin assembling it is necessary a 150 mm diameter opening.

lavabo washbasin NINA  
90x40  
art. 001 112

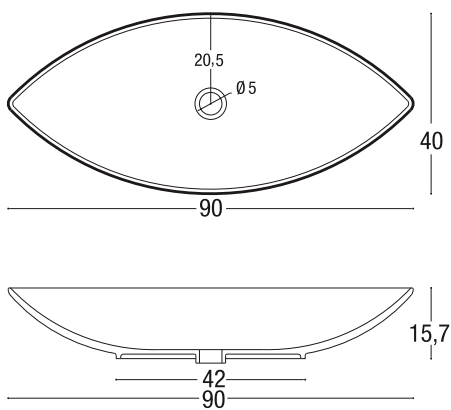

Per il montaggio il lavabo necessita di foro  $\varnothing$  150 mm For the washbasin assembling it is necessary a 150 mm diameter opening.