


lavabo washbasin FLAVIA

ø 38

art. 001 034

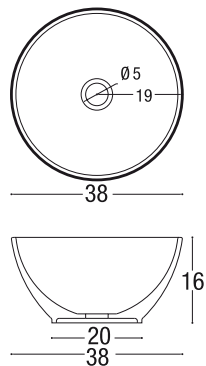


Per il montaggio il lavabo necessita di foro ø 100 mm For the washbasin assembling it is necessary a 100 mm diameter opening.

lavabo washbasin FLAVIA

ø 46

art. 001 001

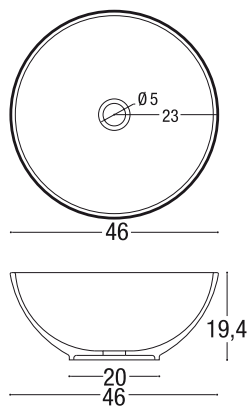

Per il montaggio il lavabo necessita di foro ø 170 mm For the washbasin assembling it is necessary a 170 mm diameter opening.